



Attach previously unmounted metal brackets with M6 x 20 bolts to the sleeper chaise side.

Attach the chaise backrest to the storage box with 4pcs M6 x 55 bolts.




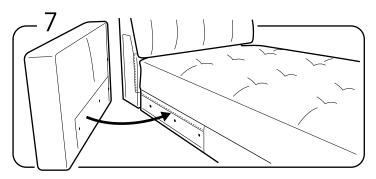

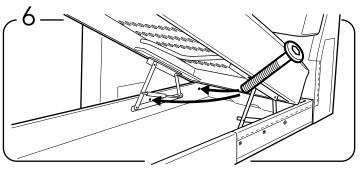


Place the armrest next to the chaise.

Fix the armrest first with two M6 x 55 bolts from inside the storage box.

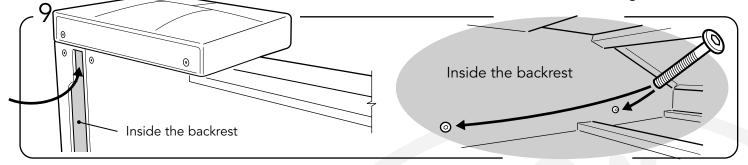

Close the chaise, turn it to the side and fix the armrest from inside the backrest with two M6 x 55 bolts.

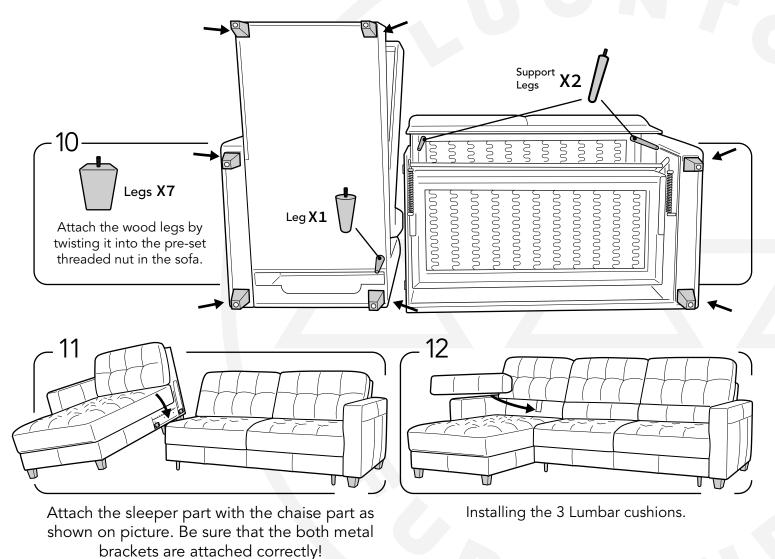

Luonto Furniture | 1007 Trident St. Unit A, Charleston, SC 29410 | www.luontofurniture.com

Page 2 of 2

