




Mount the support leg in place and screw the 2 (M6X25mm) bolts into the pre-drilled holes.

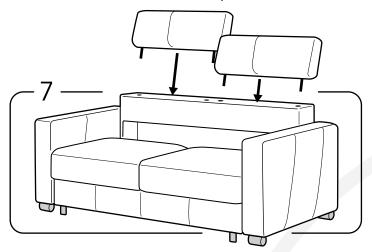


Insert the right and left ratchet back into the pre-drilled holes.

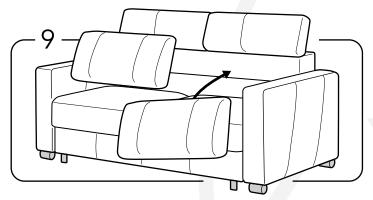


Insert the back cushion

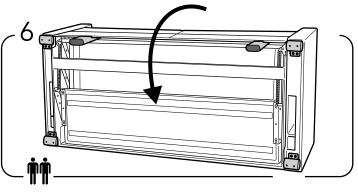

Carefully, turn the sofa upright and ensure each of the legs are installed properly.

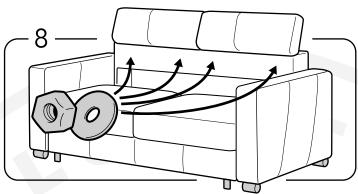

Thighten Ratchet Back Cushion to the back frame with washers and nuts.

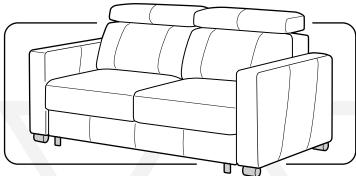

This is how the final product should look like.

