

INCLUDED



Woodscrews
3,5mmX25mm X8




8X25mm X4




Woodscrews
4,2mmX19mm X8




Woodscrews
4mmX60mm X8

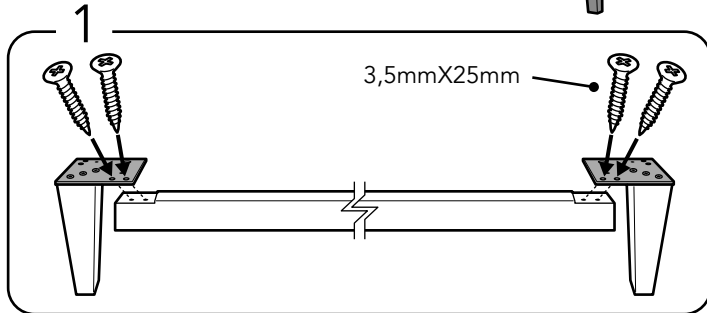


Assemble the slat to the legs, repeat the process to the front and back legs for (Part 1 of the sofa).

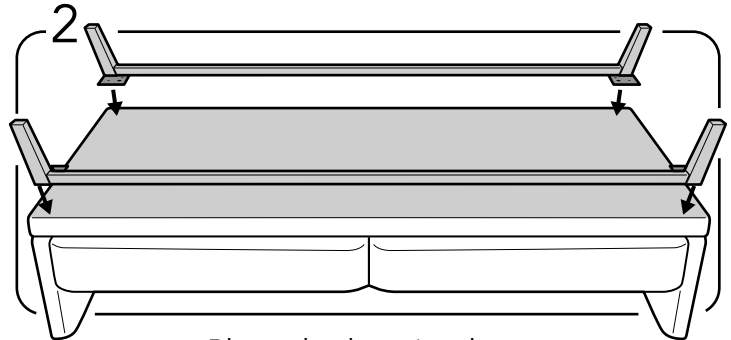


Place the legs in place.

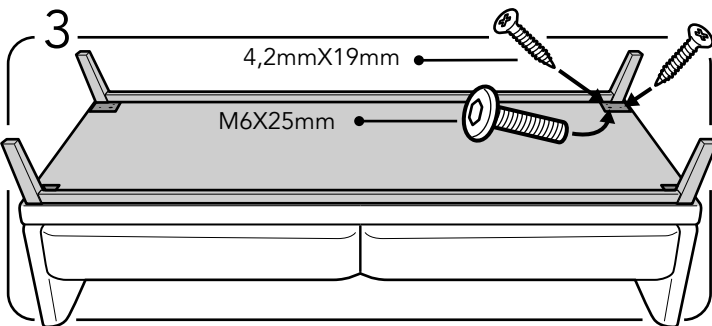


Attach each legs with the 8x25mm bolt to align the metal in place then use two screws on each leg.

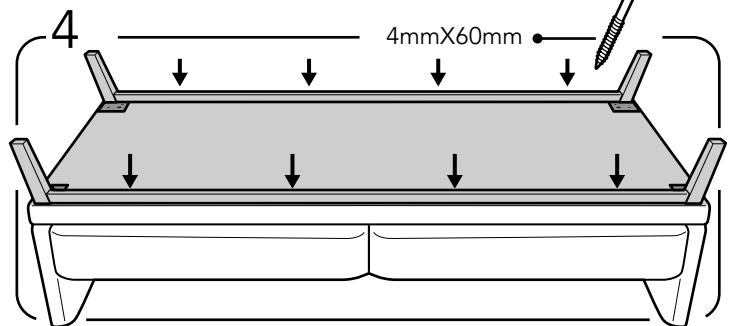


Attach the slats (use 4x60mm screws), as shown on picture

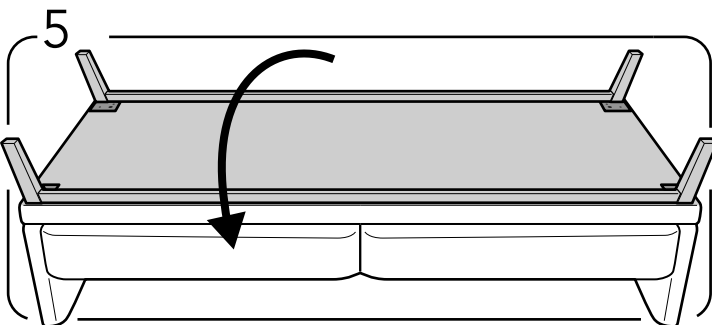

Lift up and put the sofa to the legs.

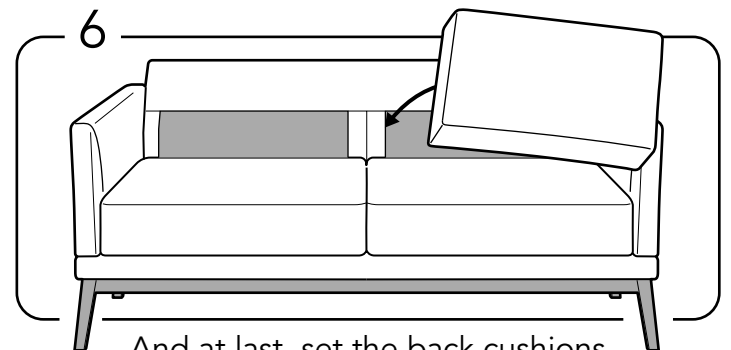

And at last, set the back cushions

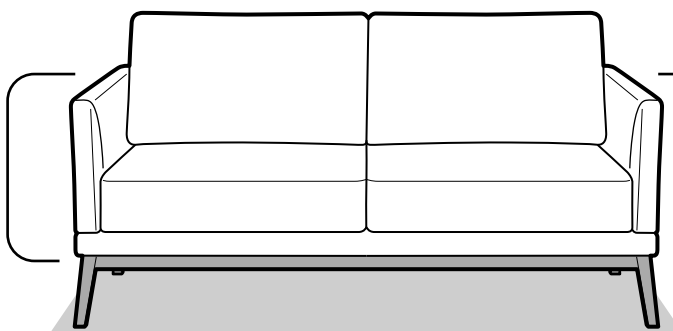

This is how the final product should look like.